


## Adjusting GTP-8980 Differential Pressure Set Point

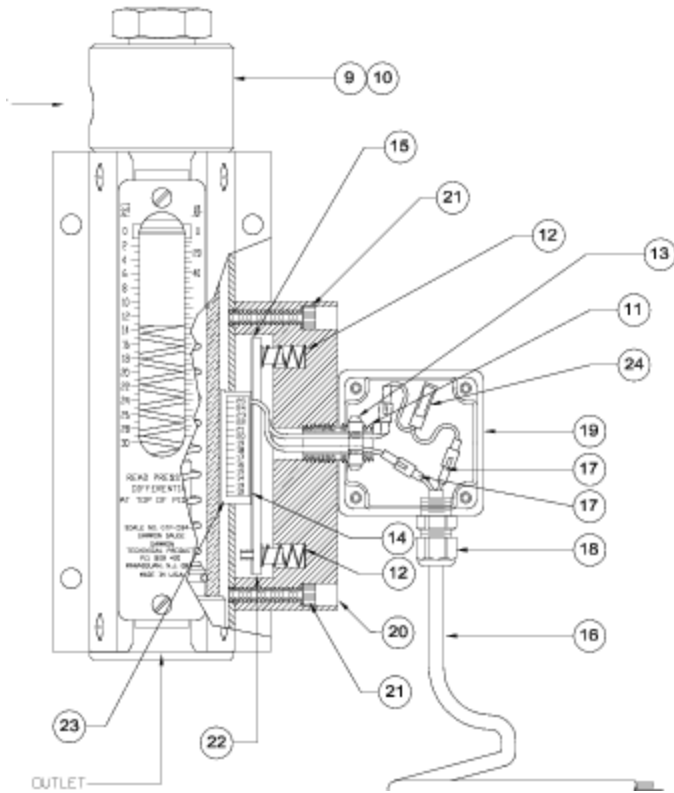

Adjust the proximity switch to 15 PSID.

- Remove two socket head screws (21) from the mounting block (20) to gain access to the switch (23).
- Adjust the switch to the desired differential pressure by removing the switch (23) from the Velcro push bar (15) and re-attach it to the bar so the "15" on the switch label aligns with the arrow marked "SET POINT" on the mounting block (20).
- Place the switch (23) in the slot in the gauge housing and connect the mounting block (20) with two socket head screws (21).

December 15, 2017